HABA

happy campers

VACUSWIFT
BY HABA

Article number: 7701800 Size: 452x75x77mm Weight: 700g

Instruction manual




Before using the product, please read this instruction manual carefully and keep it for future reference.


HABA

happy campers


COMPONENT DESCRIPTION

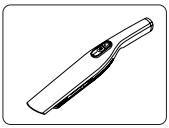


1. Vacuum cleaner

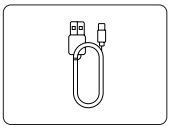


2. USB type-C charging cable

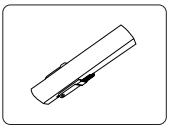


3. Crevice tool with brush

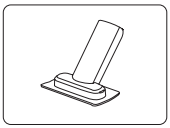


4. Nozzle small

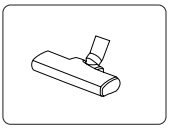

5. Floor brush

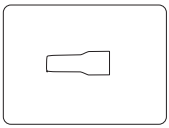


6. Adapter

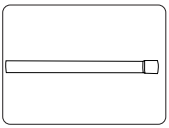

7. Extension tube


INSTRUCTIONS

FLOOR BRUSH
Use floor brush to clean floors and carpets strongly

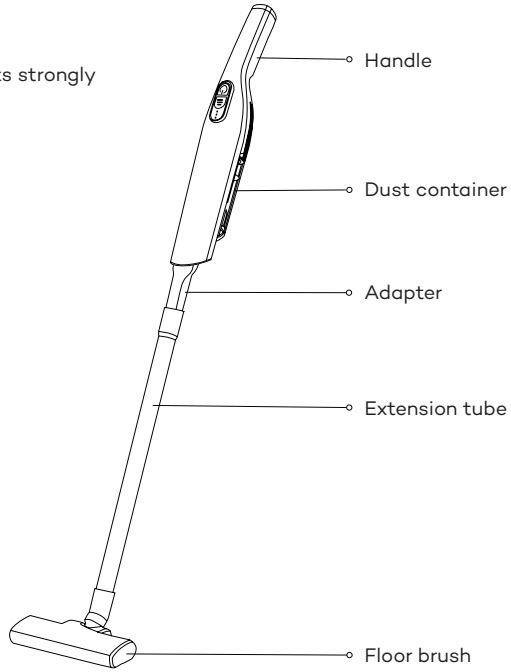


HABA

happy campers

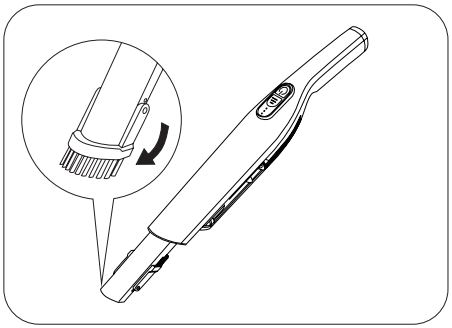

Combined flat brush
Use the combined flat brush to suck away garbage in narrow corners and crevices.

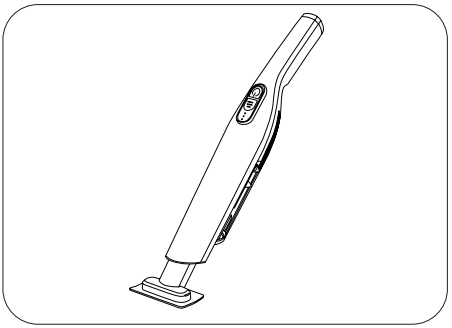

Nozzle small
When cleaning the sofa, use the small nozzle.


PRESS ⏻ TO START WORKING

- Press the mode button to switch between high and low mode
- The 3 power indicators are on constantly and the product starts to work; during the work, the indicators will turn off one by one as the power decreases.

THE POWER INDICATOR DESCRIPTION

Charging
Fully charged: three indicators are always on.
Charging: three indicators flasing one by one.


Discharge
Normal operation: according to the indicated power
Low voltage reminder: three indicators flash at the same time (slow flash), the motor keeps running.
Undervoltage protection: three indicators flash at the same time (slow flash), the motor is forced to shut down.
Overcurrent protection: three indicators flashing (quick flash).
Over-temperature protection: the indicators at both ends are flashing (quick flash), the middle indicator is off.
Shutdown: All three indicators off.

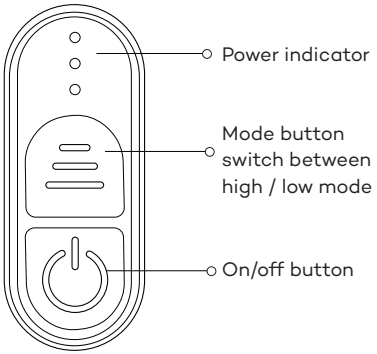

HABA

happy campers

CHARGING INSTRUCTIONS

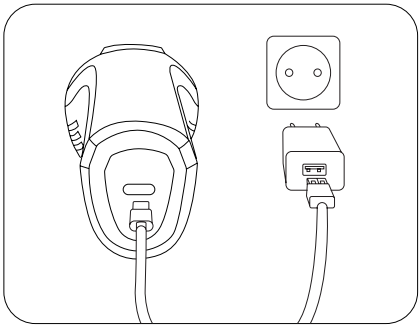



Charge with supplied charging cable.
Only use a 5V, 1A or 2A adapter.

Note: Before storage, charge the battery to approximately 80%.

In order to meet the safety requirements of transportation, the vacuum cleaner is only charged about 30% of the power, it is recommended to charge for at least 4 hours for the first time to improve the battery endurance

EMPTYING DUST CONTAINER

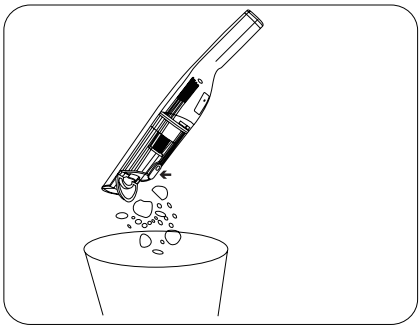

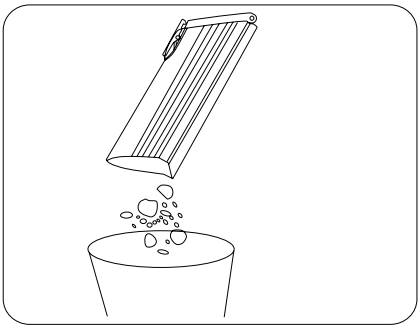

Light cleaning

1. Hold the vacuum cleaner upside down, press the dust pour button, and the dust container lid opens automatically.
2. Complete the dust pouring, cover the dust container lid.


Deep cleaning


Firstly, remove the dust container from the vacuum cleaner. Then pour the dust into the trash bin through the other side of the dust container.

HABA

happy campers

CLEANING AND MAINTENANCE

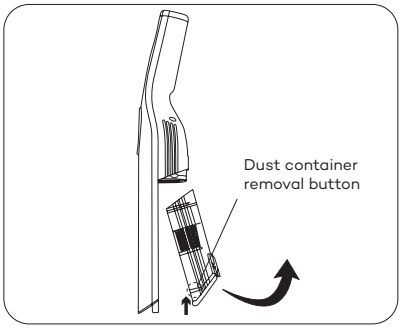

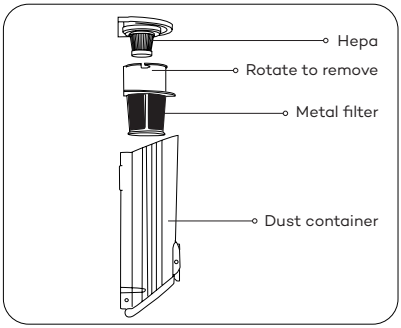



1. Remove the dust container from the vacuum cleaner.

- Press the dust container button to remove the dust container.

2. Remove the Hepa, metal filter and dust container at one time.

- After removing the dust container, hold the handle of Hepa and take it out in sequence as shown in the picture. Remove the filter components.

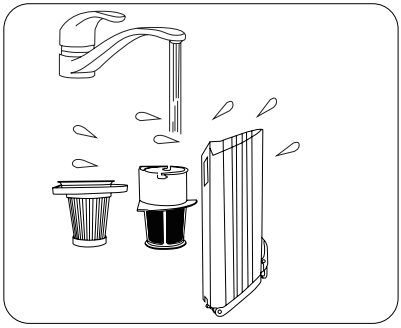

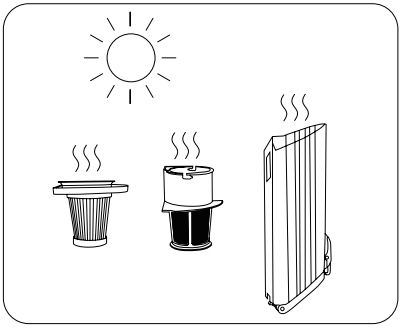


3. Wash the metal filter, Hepa and dust container with water directly.


4. After washing, please be sure to dry before use.

HABA

happy campers

DUST CONTAINER INSTALLATION SKETCH

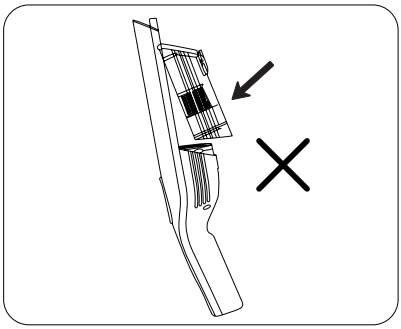

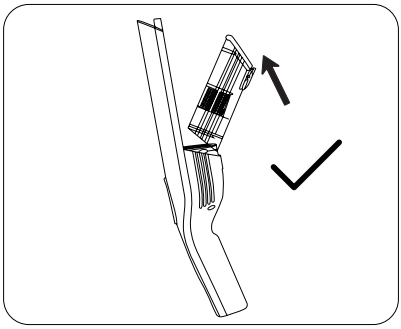

PRODUCT INFORMATION

Model	7701800
Rated Power	85W
Rated Input	5V 2A DC
Suction	7kPa±10%
Power mode	High / Low
Vacuum cleaner N/W	0.7kg
Size	452 x 75 x 77mm
Noise cleaner	High level ≤ 72dB Low level≤ 68dB
Filtration method	Stainless steel metal filter + paper HEPA filter
Dust container volume	200ml
Charging time	4 hours (there is charging protection and current limiting 600mA inside the vacuum cleaner)
Main material	ABS
Components	Vacuum cleaner, crevice tool with brush, nozzle small, floor brush, adapter, extension tube, USB type-C charging cable and storage bag
Replacement HEPA filter	Article no. 7701801, available separately

HABA

happy campers

LIGHT ABNORMAL INDICATION INSTRUCTIONS

Working status	Indicators	Fault description	Fault response
Charge	Power indicators display normally, but not charging	The battery temperature is too high	Automatically resume charging when charging temperature is lowered
Charge	All indicators on, not charged	Charging cable is broken	Check the charging cable and replace
Power on	Three indicators flash slowly	Lower power	Charge it soon
Power on	The indicators flash quickly	1. The voltage is too low 2. The motor output is broken or the motor is blocked	1. Use it after charging 2. Check the motor
Power on	Indicators at both ends flash when working	The battery temperature is too high	Use after the battery temperature is lower

FR Appareil À DÉPOSER EN MAGASIN OU À DÉPOSER EN DÉCHÈTERIE
Points de collecte sur www.quefairedemesdechets.fr
UK CA CE