

# REPLACEMENT INSTRUCTIONS

## Electric valve

by HABA

Art. 2400980



**Suitable toilet models :** C200S/CS, C220, C250, C260 <2013, C403L, C3


**Required Tools:**



Thetford article number for reference: **23709**



01.  
Pull the waste tank out of the cassette toilet by lifting up the clip.

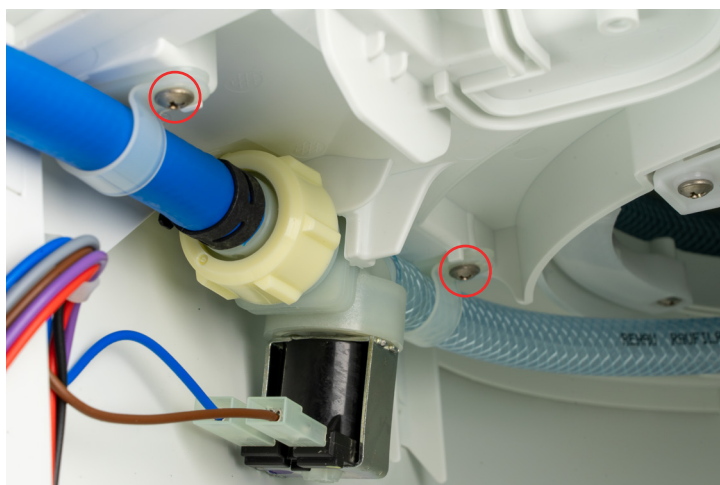

02.  
Inside view: remove the retaining clips by loosening the 2 screws.




03.  
Disconnect the plugs with the blue and brown wires.




04.  
Detach the electric valve from the  
plastic holder.




05.  
remove the water hose connection  
from the valve

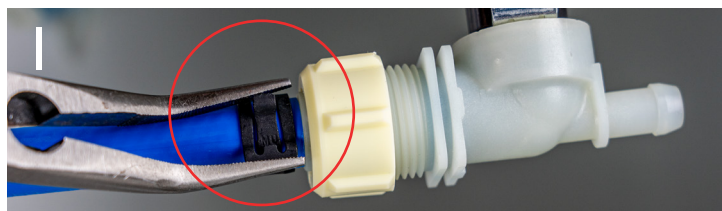

06.  
Move the clip using pliers and  
remove the tube from the valve.

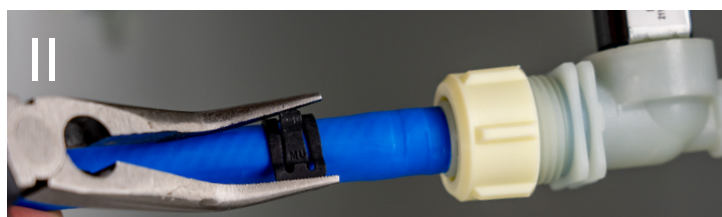

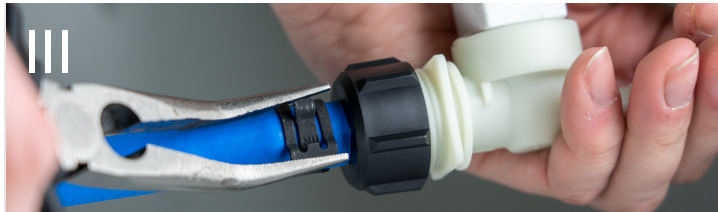

07.  
Attach the hose to the new valve and put the supplied clip back using pliers.

Make sure to use the new clips supplied to prevent leakage.



08.  
Put the valve back in the holder and tighten the 2 clips.



09.  
Reconnect the 2 wires to the back side of the valve. Use the supplied extension cables if needed.



10.  
Place the waste tank back into the toilet.

**NOTE: For older toilet models the installation can be slightly different.**